



REG	STATE	PROJECT	SHEET NO.	TOTAL SHEETS

NOTE:


1. Dimensions not labeled are in millimeters.
2. See Erosion Control Schedule for temporary culvert diameter, riprap class, channel dimensions and quantities.
3. Use plastic liner or riprap along the entire length and width of the temporary diversion channel.
4. Construct channel at a minimum grade of 0.5 percent.
5. Do not construct with longitudinal joints if using a plastic liner. Bury the upstream edge of the liner a minimum of 150 mm deep and secure with riprap or sandbags.
6. Compact temporary culvert backfill using one of the methods listed in specification 204.11(a).

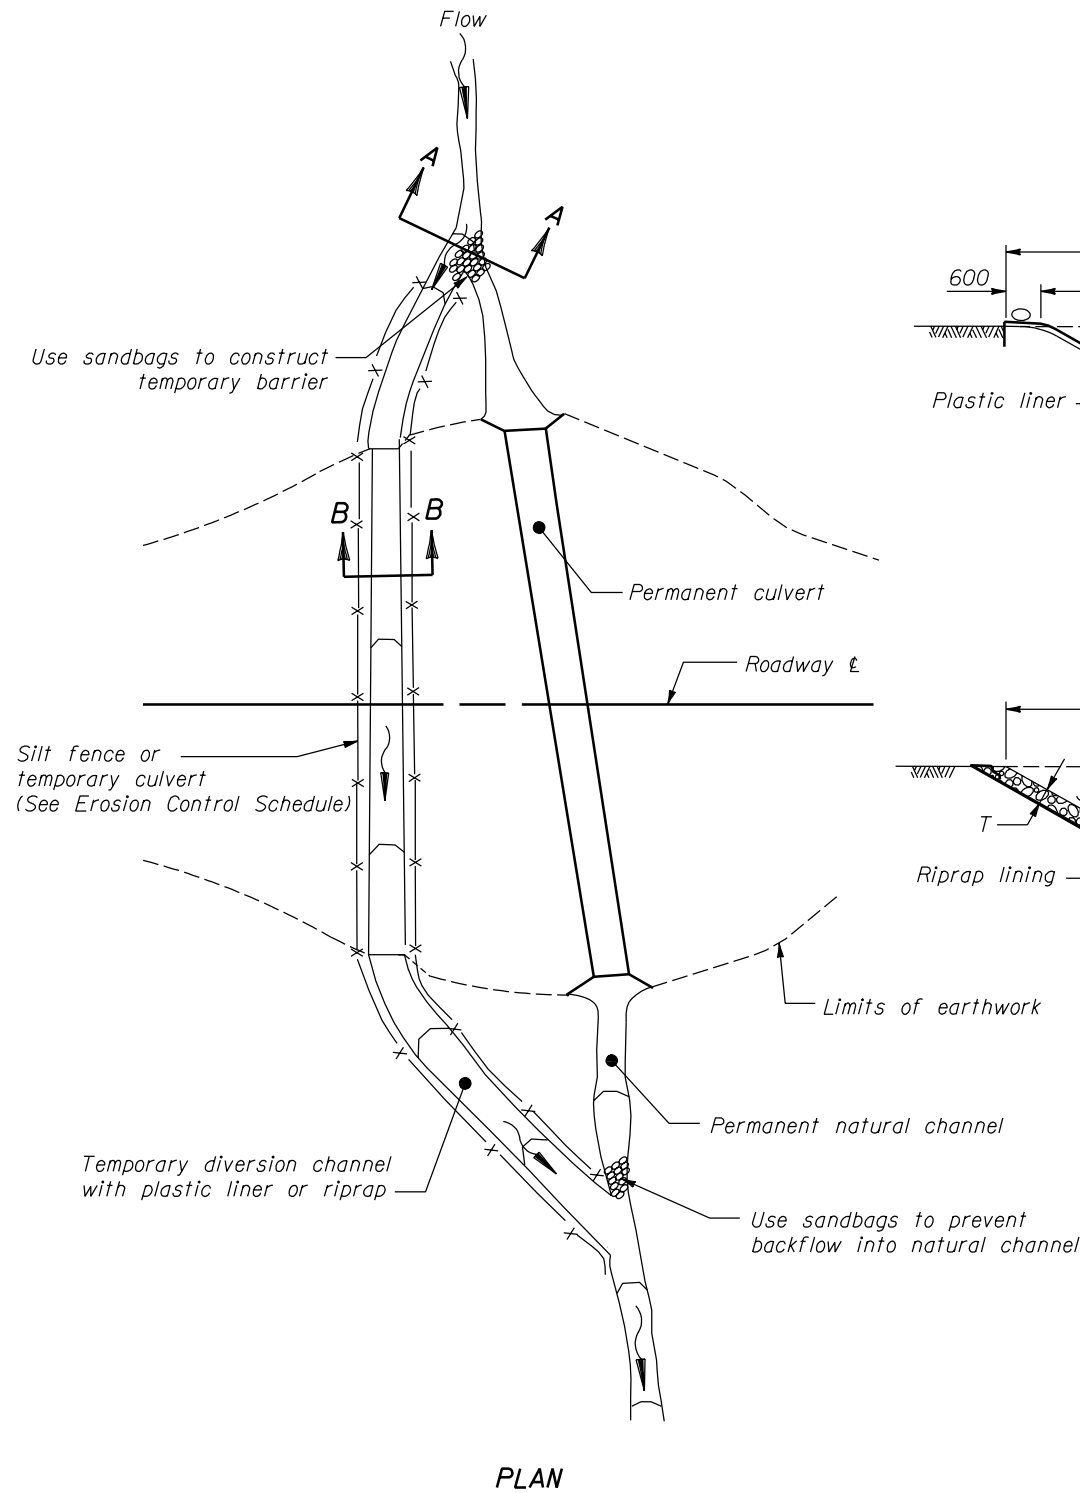

DIVERSION CHANNEL

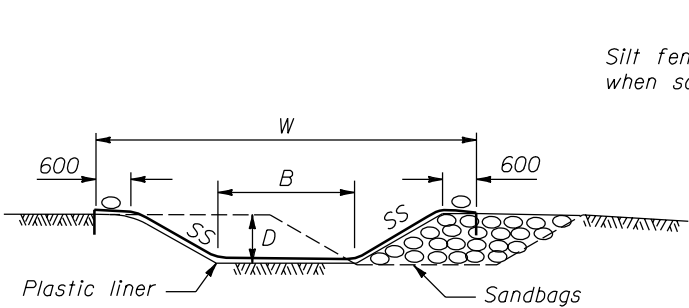


SECTION A-A

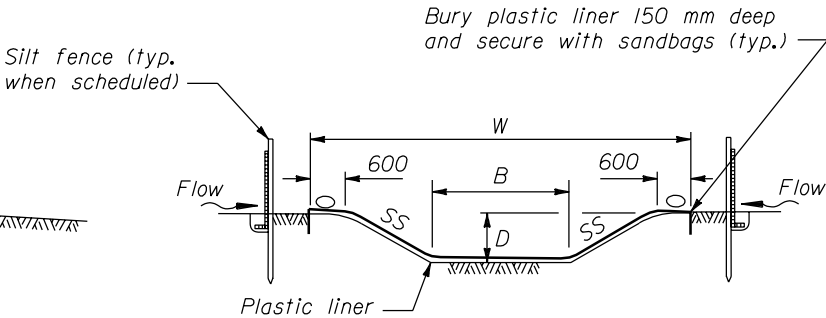


SECTION B-B

PLASTIC LINED DIVERSION CHANNEL

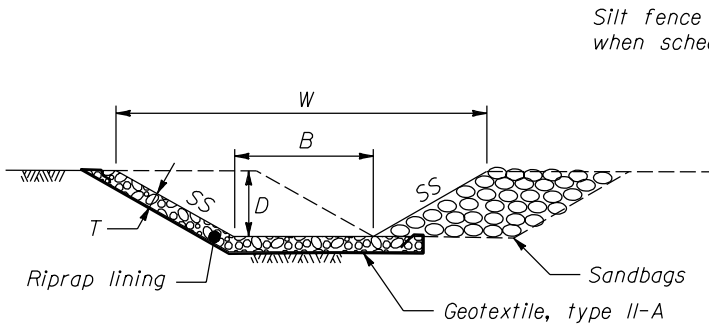


SECTION A-A

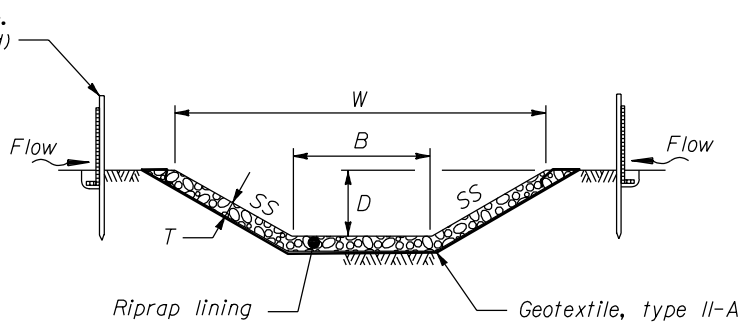

SECTION B-B

RIPRAP LINED DIVERSION CHANNEL

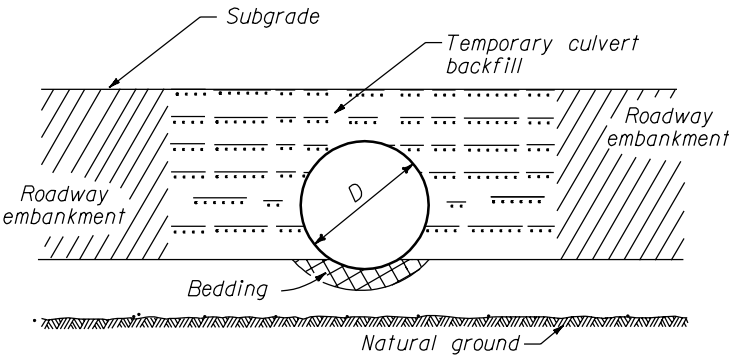

SECTION B-B

TEMPORARY CULVERT

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION FEDERAL LANDS HIGHWAY OFFICE	
METRIC STANDARD	
TEMPORARY DIVERSION CHANNELS	
STANDARD APPROVED FOR USE 03/96	STANDARD
REVISED: 12/98	MI57-5